

S.N.	S S F	Lc No	Description	Item Ty	Make for PAC	Part No
1	3	FR022	CHAIN GUIDE CARRYING	BCM	PLASSER	64-08-1000-200,
2	3	FR202	CHAIN GUIDE EMPTY FOR BCM M/C	BCM	PLASSER	64-08-1000-201
3	5	BM040	CLUTCH CYLINDER	BCM	PLASSER	2244571/KG2394.112.054
4	3	BM009	CONE BEARING	BCM	PLASSER	786030
5	3	FR180	COOLING SYSTEM	BCM	PLASSER	62-05-6000-11
6	3	BM055	DRADGER STATION	BCM	PLASSER	64-11-1000-02 / 64-11-1000-04
7	3	FR013	FILTER ELEMENT FOR CHAIN DRIVE FOR BCM MACHINE	BCM	PLASSER	62-05-2000-96
8	3	FR017	FILTER ELEMENT OF CONTROL PRESSURE FOR BCM MACHINE	BCM	PLASSER	62-05-1000-272
9	3	BM018	O RING	BCM	PLASSER	2-05922
10	3	BM086	PRESSURE SPRING	BCM	PLASSER	2-18176
11	3	BM087	PRESSURE SPRING	BCM	PLASSER	2-18177
12	3	FR024	ROLLER	BCM	PLASSER	62-11-7000-20/50
13	3	FR025	ROLLER	BCM	PLASSER	62-11-7000-29/47
14	3	FR029	ROLLER	BCM	PLASSER	62-11-7000-51
15	3	FR031	ROLLER	BCM	PLASSER	62-11-7000-45
16	3	FR047	ROLLER	BCM	PLASSER	62-11-7000-09/39
17	3	FR048	ROLLER	BCM	PLASSER	62-11-7000-10/40
18	3	FR049	ROLLER	BCM	PLASSER	62-11-7000-11/49
19	3	FR026	ROLLER	BCM	PLASSER	62-11-7000-46
20	3	FR028	ROLLER	BCM	PLASSER	62-11-7000-44
21	3	FR030	ROLLER	BCM	PLASSER	62-11-7000-42
22	3	FR148	ROLLER TYDCR	BCM	PLASSER	90X60X56 MM
23	4	FR090	RUBBER PAD	BCM	PLASSER	64-09-842
24	3	FR027	SUPPORT RING	BCM	PLASSER	62-11-7000-21/43
25	3	BM008	VIBRATION SCREEN COMPLETE FOR BCM M/C AS PER ANNEXURE-A	BCM	PLASSER	64-09-1000-95/IND.KPL
26	2	BM060	AIR PRESSUR GAUGE	BRM	KERSHAW	144216
27	5	BM051	BRAKE SHOE	BRM	KERSHAW	732106
28	2	BM069	BREAKE CHAMBER	BRM	KERSHAW	229080
29	2	BM068	BREUCE CHEMBER	BRM	KERSHAW	115880
30	4	BM075	BUSHING	BRM	KERSHAW	211222
31	4	BM077	BUSHING	BRM	KERSHAW	211620
32	4	BM076	CHAIN 60 DOUBLE	BRM	KERSHAW	210011
33	3	BM058	EMERGEINCY PUMP	BRM	KERSHAW	733626
34	3	FR002	HYD.PROPEL DOUBLE PUMP FOR BRM	BRM	KERSHAW	229055
35	4	BM072	LINK MASTER	BRM	KERSHAW	211153
36	2	BM061	OIL PRESSURE GAUGE	BRM	KERSHAW	144230
37	3	BM044	PLOW BROOM U/D CYLINDER	BRM	KERSHAW	707917
38	2	BM067	PLOW LOCK CYLINDER	BRM	KERSHAW	191243
39	3	BM045	PLOWI/O CYLINDER	BRM	KERSHAW	730563
40	4	BM070	PUSH PULL CABLE HIGH/LOW	BRM	KERSHAW	132277
41	4	BM071	PUSH PULL CABLE THROTAL	BRM	KERSHAW	132179
42	2	BM059	RELAY	BRM	KERSHAW	164032
43	2	BM062	SENDER AIR/OIL PRESSURE	BRM	KERSHAW	144224
44	2	BM064	SENDER FUEL LEVEL GAUGE	BRM	KERSHAW	729646
45	2	BM066	SENDER TACHOMETER	BRM	KERSHAW	716880
46	2	BM063	SENDER WATER TEMPERATURE	BRM	KERSHAW	144225
47	4	BM049	SOCHK ABSORBER	BRM	KERSHAW	201681
48	4	BM073	SPROKET	BRM	KERSHAW	718362

S.N.	S S F	Lc No	Description	Item Ty	Make for PAC	Part No
49	4	BM074	SPROKET	BRM	KERSHAW	229072
50	2	BM065	WATER TEMP. GAUGE	BRM	KERSHAW	144211
51	3	BM047	WING 1/O CYLINDER	BRM	KERSHAW	174977
52	3	BM050	WING TEMP.1/O CYLINDER	BRM	KERSHAW	184092
53	3	BM046	WING TILT CYLINDER	BRM	KERSHAW	781967
54	4	BR040	NEEDLE CAGE BEARING	BRO	ZF	0635-300-151
55	4	BR049	NEEDLE CAGE BEARING	BRO	ZF	0635-300-117
56	4	BR154	NEEDLE ROLLER & CAGE ASSY	BRO	ZF	0735-320-111
57	4	BR155	NEEDLE ROLLER & CAGE ASSY	BRO	ZF	0735-320-206
58	4	BR156	NEEDLE ROLLER & CAGE ASSY	BRO	ZF	0750-118-019
59	4	BR157	NEEDLE ROLLER & CAGE ASSY	BRO	ZF	0735-320-204
60	4	BR050	ROLLER BEARING	BRO	ZF	0635-410-143
61	4	BR096	ROLLER BEARING	BRO	ZF	0635-450-126
62	4	BR158	TAPER ROLLER & CAGE ASSY	BRO	ZF	0735-320-110
63	4	CS011	CARDON SHAFT	CS	PLASSER	KGW-660-110-00
64	4	CS017	CARDON SHAFT	CS	PLASSER	KGW-150-0700-110-00
65	4	CS034	CARDON SHAFT	CS	PLASSER	KGW-150-1200-110-00
66	4	CS041	CARDON SHAFT	CS	PLASSER	KGW-180-1170-110-00
67	4	CS042	CARDON SHAFT	CS	PLASSER	KGW-150-1000-110-00
68	4	CS060	CARDON SHAFT	CS	PLASSER	UD-72-4224 / LZ-400-LA50
69	4	LG122	CARDON SHAFT	CS	PLASSER	KGW-150-0950-110-00
70	4	LG126	CARDON SHAFT	CS	PLASSER	LZ-900-LA-80, UD-70-5231
71	4	LG130	CARDON SHAFT	CS	PLASSER	KGW-180-1000-110-80
72	4	CS053	CARDON SHAFT	CS	PLASSER	LZ-325 , LA-350112131
73	4	LG123	CARDON SHAFT	CS	PLASSER	KGW-180-0900-110-00/50
74	4	LG124	CARDON SHAFT	CS	PLASSER	LZ-420-LA-50, UD-72-2719
75	4	LG125	CARDON SHAFT	CS	PLASSER	LZ-740-LA-80, UD-387-20/30
76	4	LG127	CARDON SHAFT	CS	PLASSER	LZ-200/187-20
77	4	LG128	CARDON SHAFT	CS	PLASSER	KGW-180-1300-110-00
78	4	LG129	CARDON SHAFT	CS	PLASSER	KGW-180-1100-110-00
79	4	LG131	CARDON SHAFT	CS	PLASSER	KGW-180-1250-110-00
80	4	LG132	CARDON SHAFT	CS	PLASSER	KGW-180-1250-110-00/80
81	4	LG133	CARDON SHAFT	CS	PLASSER	KGW-150-900-110-00
82	4	LG134	CARDON SHAFT	CS	PLASSER	KGW-180-950-110-00
83	4	LG120	CARDON SHAFT	CS	PLASSER	KGW-900-110-00, KGW-180-1000-110-00
84	4	DU046	CARDON SHAFT	CS	PLASSER	LZ-500-L-450/187.20
85	5		Engine and Spares for Cummins Engine	CU	Cummins	As per Catlog
86			Elbow	Deutz	PLASSER	3900025224
87			Connecting piece	Deutz	PLASSER	130X6mm-90LG
88			Gusseted Tube	Deutz	PLASSER	ID 130-300LG
89			Hose clip	Deutz	PLASSER	ABA130-165/12
90			Reduction	Deutz	PLASSER	2102211
91	5		Engine and Spares for Deutz Engine	DTZ	DEUTZ	As per Catlog
92	2	EL332	3-PROPORTISNAL TRASDUDUCER	EL	PLASSER	EL-T-2013-00RE
93	2	LG370	ANGULAR GEAR	EL	PLASSER	1022-01-32-1000-KURZ
94	2	EL308	COUPLING	EL	PLASSER	64-13-4032
95	2	EL167	DIGITAL DISPLAY	EL	PLASSER	EL-T-790-00E
96	2	EL139	DIGITAL INDICATOR / DISPLAY	EL	PLASSER	EL-T-1473-10 V
97	2	EL263	DRIVE SHAFT	EL	PLASSER	EL-T-155-03-650LG / 850LG
98	2	EL311	ELECTRIC CYLINDER LIFTING	EL	PLASSER	EL-T-7091-00
99	2	EL312	ELECTRIC LIFTING CYLENDER	EL	PLASSER	EL-T-7059-00

S.N.	S S F	Lc No	Description	Item Ty	Make for PAC	Part No
100	2	EL313	INDICATOR	EL	PASSER	EL-T-1423-00
101	2	EL271	JACK	EL	PASSER	6144217
102	2	EL253	MICRO CONTROLLER X-LASER	EL	PASSER	EL-T-5618
103	2	CS004	PRESSURE SWITCH	EL	PASSER	90450-R2/20
104	2	FR083	PRESSURE SWITCH	EL	PASSER	64-07-1000-163
105	3	CS-013	PRESSURE SWITCH	EL	PASSER	90451-R2/20
106	2	FR098	PRESSURE SWITCH	EL	PASSER	64-07-1000-55
107	2	FR099	PRESSURE SWITCH	EL	PASSER	PIS-3020
108	2	EL325	PRESSURE SWITCH	EL	PASSER	PIS-3070
109	2	CS-106	PRESSURE SWITCH	EL	PASSER	64-07-1000-57, 64-07-1000-54
110	2	EL273	RAIL	EL	PASSER	EL-T-4111-00 / EL-T-4112-00
111	2	EL306	ROLLER	EL	PASSER	EL-T-490-00E
112	2	EL294	SHAFT	EL	PASSER	140-07
113	2	EL270	SHOE	EL	PASSER	2-330-854-6
114	2	EL303	SOCKET	EL	PASSER	RM-78705
115	2	EL274	SPACER SLEEVE	EL	PASSER	EL-T-4110-00
116	2	EL272	STEERING	EL	PASSER	163007
117	2	EL309	TECHOGRAPH	EL	PASSER	EL-T-2060/125KM/II-WK/ERSATZ
118	2	EL204	TECHOMETER	EL	PASSER	EL-T-1263-00
119	2	EL291	THERMOMETER	EL	PASSER	EL-T-1259-00/250/B
120	2	EL038	VOLT METER	EL	PASSER	EL-T-7004/7005-00E
121	2	EL144	VOLT METER	EL	PASSER	EL-T-439-00
122	2	EL251	VOLT METER	EL	PASSER	EL-T-7066-00EA
123	2	EL001	VOLT METER	EL	PASSER	EL-T-1261-00
124	2	EL252	VOLT METER	EL	PASSER	EL-T-336-00E
125	2	CS073	FLEXIBLE SHAFT(IMPORTED) / RPM CABLE	ELE	PASSER	DL-230-118/ELT-1004-800LG
126	2	FR124	2 WAY VALVE	FRM	PASSER	90371
127	4	FR079	BUSH	FRM	PASSER	64-02-2107-00
128	4	FR135	CHAIN ADJUSTER	FRM	PASSER	3000-03-120ABR-SPGL
129	4	FR068	COVER BOW FOR CONVEYOR DRUM	FRM	PASSER	62088032/62088033
130	4	FR125	COVER BOW OF MAIN CONVEYOR UNIT OF FRM-80	FRM	PASSER	RE-30-151
131	4	FR126	COVER BOW OF MAIN CONVEYOR UNIT OF FRM-80	FRM	PASSER	RE-30-152
132	4	GL036	DRIVE AXLE COMPLETE FOR FRM	FRM	PASSER	64-02-2105-00 [WN-04-1676-900-2105-1]
133	4	FR081	EXCATING CONVYOR COVER	FRM	PASSER	SU-1502-208-6-13-8
134	4	FR095	EXCAVATING CONVERYOR COVER	FRM	PASSER	RE-20-218
135	4	FR094	EXCAVATING CONVEYOR COVER	FRM	PASSER	RE-20-217
136	4	FR096	EXCAVATING CONVEYOR COVER	FRM	PASSER	RE-30-112
137	4	FR097	EXCAVATING CONVEYOR COVER	FRM	PASSER	SU-1502-208-6-13-8
138	4	FR118	EXCAVATING COVER	FRM	PASSER	RE-20-308
139	4	FR119	EXCAVATING COVER	FRM	PASSER	RE-20-309
140	3	FR051	GUIDE BLOCK	FRM	PASSER	RE-22-209
141	4	FR196	GUIDENCE OF EXCAVATING UNIT OF FRM-1886	FRM	PASSER	SU-1702-21-1-17
142	3	FR082	PRESSURE SPRING	FRM	PASSER	64-09-1348
143	4	FR073	RIVETS FOR FRM	FRM	PASSER	8MM/6MM
144	4	FR089	SIDE PLATE	FRM	PASSER	64-09-4051
145	4	FR136	SIDE WALL	FRM	PASSER	RE-350-103
146	4	FR137	SIDE WALL	FRM	PASSER	RE-350-104
147	4	FR138	SIDE WALL	FRM	PASSER	RE-350-105
148	4	FR139	SIDE WALL	FRM	PASSER	RE-350-106
149	4	FR140	SIDE WALL	FRM	PASSER	RE-350-107

S.N.	S S F	Lc No	Description	Item Ty	Make for PAC	Part No
150	4	FR142	SIDE WALL	FRM	PLASSER	RE-350-109
151	4	FR144	SIDE WALL	FRM	PLASSER	RE-350-102
152	4	FR141	SIDE WALL	FRM	PLASSER	RE-350-108
153	4	FR143	SIDE WALL	FRM	PLASSER	RE-350-101
154	4	FR087	SLIDER FOR EXCAVATING UNIT OF FRM -80	FRM	PLASSER	RE-21-205
155	4	FR091	STRIP	FRM	PLASSER	64-09-8-54
156	4	FR092	STRIP	FRM	PLASSER	RE-30-242
157	4	FR093	STRIP	FRM	PLASSER	RE20-1050-9
158	4	BM016	SUPPORT RING	FRM	PLASSER	62-11-7000-40
159	4	CS140	COUPLING	GBX	PLASSER	WN-220-27
160	4	PC105	FLEXIBLE COUPLING	GBX	PLASSER	WN-220-36
161	4	BM026	FRONT MAIN GEAR BOX FOR BCM	GBX	PLASSER	64.04.3000.180
162			Main Gear box for BCM	GBX	PLASSER	54.04.3000.180
163	4	GL369	OUT PUT SHAFT	GBX	ZF	1240-310-013/1240-3100-13
164	4	18024	POWER SHIFT GEAR BOX	GBX	ZF	4WE-65ii-6735(DGS-362)
165	4	TX076	PUMP GEAR BOX & CLUTCH	GBX	PLASSER	WN-80-7400 , UD-70-45301/UD-17-4530-ICO
166	4	BM027	REAR MAIN GEAR BOX FOR BCM	GBX	PLASSER	64.04.3000.182
167	4	TX074	REDUCTION GEAR BOX	GBX	PLASSER	WN-83-10 EM-1045F/7-1/00-OMS-D32-P
168	4	PC064	REDUCTION GEAR BOX ASSEMBLY COMPLETE	GBX	PLASSER	EM-1045-MR-1/3-55
169	4	DU057	REVERCING GEAR BOX COMPLETE (IMPORTED) FOR Z F	GBX	ZF	WV-80 1250-149-002
170	4	CS129	SATELITE REDUCTION GEAR BOX	GBX	PLASSER	1045-F/7-1-100-OMS-D-32P
171	5	CU044	ALTERNATOR / DYNAMO	GEN	PLASSER	0120689545 , 0120689505
172	4	DU028	AXLE (SHAFT)	GEN	PLASSER	WN-70-1107
173	3	PC073	HOOK UP/DOWN CYLINDER WITH IMPORTED SEAL SET	HYC	PLASSER	UD-313-3305 LI , UD-313-3305 RE, CU-311-3007A-LI/RE
174	3	TX041	HYD CYLINDER FOR TAMPING UNIT UP / DOWN [IMPORTED]	HYC	PLASSER	HZDPA-080-040-0835-01-001
175	3	CS032	TAMPING UNIT LIFTING LOWRING [UP/DOWN] CYL	HYC	PLASSER	HZDGB-080-040-0760-1-001
176	3	FR201	AIR CONDITIONING UNIT FOR BCM	HYD	PLASSER	CC7/HYDROOHNE AT-3900/EVO/2
177	3	CS078	HYD (RADIATOR) OIL COOLER	HYD	PLASSER	HY-157-17
178	3	GL097	HYD OIL COOLER	HYD	PLASSER	HY157.39
179	3	CS077	HYD OIL COOLER ALUMINIUM TYPE FOR CSM	HYD	PLASSER	HY-157-39A
180	3	GL080	PRESSURE GAUGE ISOLATOR	HYD	PLASSER	HY-154-05H
181	3	DU025	SET OF S S STRIP & LOCK	HYD	PLASSER	19x1000
182	3	DU026	STAINLESS STEEL STRIP	HYD	PLASSER	19mm
183	3	FR023	CLUTCH FILTER FOR BCM	HYF	PLASSER	62-05-1000-113
184	3	BM012	FILTER	HYF	PLASSER	62-05-1000-271/471
185	3	CS161	FILTER	HYF	PLASSER	HYD-501-32-10H
186	3	CS162	FILTER	HYF	PLASSER	DL-40-60-H
187	3	GL010	FILTER BODY	HYF	PLASSER	HYS-501-160-P10
188	3	CS160	FILTER BODY	HYF	PLASSER	HYD-501-225-25H
189	3	FR036	FILTER ELEMENT	HYF	PLASSER	62-05-1000-256
190	3	FR151	FILTER ELEMENT	HYF	PLASSER	62-05-4000-274 ES
191	3	FR152	FILTER ELEMENT	HYF	PLASSER	62-05-1000-113 ES
192	3	CS027	FILTER ELEMENT	HYF	PLASSER	HYD-501-225-25ES
193	3	GL099	FILTER ELEMENT	HYF	PLASSER	HYS-501-160-P-10-ES
194	3	FR035	FILTER ELEMENT	HYF	PLASSER	623-05-1000-187
195	3	FR012	FILTER ELEMENT FOR FRM	HYF	PLASSER	62-05-1000-293
196	3	CS009	FILTER ELEMENT FOR SERVO VALVE	HYF	PLASSER	DL-40-60-3E

S.N.	S S F	Lc No	Description	Item Ty	Make for PAC	Part No
197	3	GL370	HYD FILTER	HYF	PLASSER	HYD-501-32-10ES
198	3	CS007	HYD RETURN FILTER	HYF	PLASSER	HYR-501-330-10ES
199	3	CS006	HYD SUCTION FILTER COMPLETE WITH ELEMENT	HYF	PLASSER	HYS-501-360-150
200	3	FR032	MAIN GEAR LUB FILTER FOR BCM	HYF	PLASSER	62-05-4000-247
201	3	GL098	PRE FILTER CARTIDGE FOR DUO	HYF	PLASSER	HYD-501-5-10ES
202	3	DU289	PROPORTIONALE FILTER HOUSING BODY	HYF	PLASSER	HYD-501-1
203			RETURN FILTER	HYF	PLASSER	HY-501-R-330-10ES
204	3	DU008	RETURN FILTER	HYF	PLASSER	HY-501-R-330-25
205	3	FR015	RETURN FILTER ELEMENT FOR BCM MACHINE	HYF	PLASSER	62-05-1000-273
206	3	FR016	RETURN FILTER ELEMENT FOR DISTRIBUTOR & WASHER CONVEYOR FOR BCM MACHINE	HYF	PLASSER	62-05-1000-270
207	3	FR014	RETURN FILTER FOR CHAIN DRIVE FOR BCM MACHINE	HYF	PLASSER	62-05-2000-95
208	5	CS167	RETURN FLOW FILTER CPC (BODY)	HYF	PLASSER	HY-R-501-330-10
209	3	CS094	SUCTION FILTER ELEMENT	HYF	PLASSER	HYS-501-460-150-ES
210	3	TX098	HYD MOTOR FOR RADIATOR	HYM	PLASSER	A2FM45/61W
211	3	BM005	HYD. MOTOR FOR BCM M/C	HYM	PLASSER	62-05-4000-24
212	3	FR042	MOTOR FOR SWIVELING BELT FOR BCM	HYM	PLASSER	62-05-4000-35
213	3	BM006	RADIATOR FOR BCM MACHINE.	HYO	PLASSER	2-7902-2-31-08-00.
214	3	BM028	FUEL PUMP	HYP	PLASSER	958023005
215	3	SR149	GASKET for BCM M/C	HYS	PLASSER	HZ-02-125-050
216	3	SR150	GASKET for BCM M/C	HYS	PLASSER	HZ-02-100-045
217	3	SR151	GASKET for BCM M/C	HYS	PLASSER	HZ-02-063-036
218	3	SR147	PISTON GASKET for BCM M/C	HYS	PLASSER	HZ-01-100
219	3	SR148	PISTON GASKET for BCM M/C	HYS	PLASSER	HZ-01-063
220	3	SR173	PISTON GASKET for BCM M/C	HYS	PLASSER	HZ-01-040
221	3	SR174	PISTON GASKET for BCM M/C	HYS	PLASSER	HZ-01-050
222	3	SR146	PISTON GASKETfor BCM M/C	HYS	PLASSER	HZ-01-125
223	3	SR153	SEAL KIT for BCM M/C	HYS	PLASSER	HZD-02-080-040
224	3	SR155	SEAL KIT for BCM M/C	HYS	PLASSER	UD-313-496-DS
225	3	SR179	SEAL KIT for BCM M/C	HYS	PLASSER	HZ-02-125-090
226	3	BM013	SEAL KIT TENSIONING CYLINDER	HYS	PLASSER	64-08-4000-04DS
227	3	SR154	SEAL RING for BCM M/C	HYS	PLASSER	P-12 S-80X100X12.5
228	3	SR163	SEAL RING for BCM M/C	HYS	PLASSER	HZ-02-063-040
229	3	SR218	SEAL SET	HYS	PLASSER	HZ-02-063-025
230	3	BM011	SEAL SET EXTRA LIFTING CYL. O,RING 100,97X5,33-N-DIN-3371-NBR90	HYS	PLASSER	100,97X5,33-N-DIN-3371-NBR90
231	3	SR175	SEAL SET for BCM M/C	HYS	PLASSER	HZ-02-040-025
232	3	SR176	SEAL SET for BCM M/C	HYS	PLASSER	HZ-02-080-045
233	3	SR177	SEAL SET for BCM M/C	HYS	PLASSER	HZ-02-100-063
234	3	SR180	SEAL SET for BCM M/C	HYS	PLASSER	HZ-02-050-036
235	3	FR086	SEAL SET FOR CHAIN TENSIONING CYL. FOR BCM MACHINE.WIPER	HYS	PLASSER	A2/100X112X12/7-PU=06, P-12S-100X125X15.5=02,T-18-125X100X15
236	3	SR202	SEAL SET FOR LINING CYL AXIAL DISPLACEMENT	HYS	PLASSER	0-3371-037-0-01 FOR TRT
237	3	SR144	SEAL SET FOR T/U GUIDE ROD [PISTON GASKET] for BCM M/C	HYS	PLASSER	HZ-01-080
238	3	SR136	SEAL SET FOR T/U LIFTING LOWERING CYL FOR CSM	HYS	PLASSER	HZ-01-080 C , HZ-02-080-040
239	3	SR137	SEAL SET FOR WHEEL SUPPORT CYL	HYS	PLASSER	UD-50-100-DS
240	3	SR247	SEAL SET FOR WHEEL SUPPORT CYLINDER	HYS	PLASSER	UD-50-2200- DS
241	3	SR178	SEAL SETfor BCM M/C	HYS	PLASSER	HZ-02-125-063
242	3	GL078	4 WAY SOL. VALVE FOR O9-3X/MPT	HYV	PLASSER	HY-157-44A
243	3	GL410	CHECK VALVE	HYV	PLASSER	90381 / 90248

S.N.	S S F	Lc No	Description	Item Ty	Make for PAC	Part No
244	3	BM 003	CHECK VALVE	HYV	PASSER	112556
245	3	CS010	D C VALVE	HYV	PASSER	1/8" 3/2 ON-OFF
246	3	FR104	DIRECTIONAL CONTROL VALVE FOR HYDRAULIC SYSTEM	HYV	PASSER	62-05-2000-44
247	3	DU015	HYD PROPORTIONAL VALVE [IMPORTED]	HYV	PASSER	HYN-25-RPES-325-TDS-0728
248	2	GL399	HYD SAFTY VLAVE	HYV	PASSER	HY-157-27-160 BAR
249	3	TX099	HYD VALVE WITH TOP PLUG	HYV	PASSER	3DREE16P4X/100XY/0042 & CVD-24/10
250	3	FR117	HYD. CONTROL VALVE	HYV	PASSER	62-05-3000-379
251	3	FR121	HYD.CONTROL VALVE	HYV	PASSER	62-05-3000-516
252	3	FR197	HYD.D.C. VALVE(CONTROL VALVE BLOCK)	HYV	PASSER	HY-10-RSMJ-1
253	3	FR167	HYD.PRESSURE VALVE FOR BCM	HYV	PASSER	HY-155-13
254	3	PC053	LOGIC VALVE	HYV	PASSER	HY-151-171
255	3	CS085	PRESSURE RELIEF VALVE / SATELLITE BY PASS VALVE	HYV	PASSER	HY-511-38-160 BAR
256	3	FR122	PRESSURE VALVE	HYV	PASSER	62-05-4000-266
257	3	TX111	REDUCING VALVE	HYV	PASSER	HY-511-31
258	3	BM037	SAFTY VALVE	HYV	PASSER	179965 / 1080 / 2080
259	3	CS166	SATELLITE BYPASS VALVE	HYV	PASSER	HY-151-172A WITH HY-511-38/160 BAR
260	3	BM036	SOLENOID VALVE	HYV	PASSER	185095/024 SUBSTITUTE NO.170897/024
261	3	BM010	SPARE PARTS FOR HYD. CUTTER 1 SET CONSISTING OF 16 ITEMS, (1)MOUNTING BLOCK HY-150-32,(2) BRACKET IN43-559, (3)IN43-534(4)PLASTIC CLEMP ASSY. WN4-5-2A6 (5)CYL. RM08A-27-0130,(6)FORK RM08A-0110, (7)BL	HYV	PASSER	64-08-1995,64-08-1927,DA-17-0450-N90,21X400IN1481,RM08-25.21
262	3	TX108	VALVE BLOCK WITH PROPORTIONAL VALVE FEEDER FOR O9-3X M/C	HYV	PASSER	HY-151-204
263			Control valve	HYV	PASSER	62.05.4000.386
264	5		Engine and Spares for Greaves Engine	MWM	Greaves	As per Catlog
265	2	OL002	SILICON OIL	OIL	PASSER	AK-5000
266	2	EL219	BRACKET	PCB	PASSER	29554
267	2	EL207	EPROM-HI	PCB	PASSER	2764-A
268	2	EL268	L P MODULE	PCB	PASSER	EL-T-6446-00
269	2	EL234	MODULE	PCB	PASSER	6041-232-210/184
270	2	EL156	P C B	PCB	PASSER	EK-319-LV-00
271	2	EL254	P C B	PCB	PASSER	EL-T-5031-002
272	2	EL255	P C B	PCB	PASSER	EL-T-5227-002
273	2	EL267	P C B	PCB	PASSER	EL-T-5534-001 RE
274	2	EL275	P C B	PCB	PASSER	EK-207V-00
275	2	EL292	P C B	PCB	PASSER	EK-727A-00
276	2	EL295	P C B	PCB	PASSER	EK-F3-00
277	2	EL310	P C B	PCB	PASSER	64-07-5000-139
278	2	EL327	P C B	PCB	PASSER	EL-T-5507
279	2	EL330	P C B	PCB	PASSER	64-07-5000-159
280	2	EL331	P C B	PCB	PASSER	64-07-1000-217
281	2	EL264	P C B	PCB	PASSER	EL-T-6109-00
282	2	EL266	P C B	PCB	PASSER	EL-T-5231-00
283	2	EL287	P C B	PCB	PASSER	EL-T-5348-00
284	2	EL314	P C B	PCB	PASSER	EL-T-1318.00
285	2	EL158	P C B	PCB	PASSER	EK-2324-LV-00
286	2	EL050	P C B	PCB	PASSER	EK-280-LV-00
287	2	EL002	P C B	PCB	PASSER	EK-805-SV-00
288	2	EL017	P C B	PCB	PASSER	EK-554P-00A

S.N.	S S F	Lc No	Description	Item Ty	Make for PAC	Part No
289	2	EL036	P C B	PCB	PLASSER	EL-T-5034
290	2	EL037	P C B	PCB	PLASSER	EL-T-5025-00A
291	2	EL040	P C B	PCB	PLASSER	EL-T-5391-00
292	2	EL042	P C B	PCB	PLASSER	EL-T-5501-00
293	2	EL058	P C B	PCB	PLASSER	EL-T-5140-00
294	2	EL062	P C B	PCB	PLASSER	EK-552P-00
295	2	EL066	P C B	PCB	PLASSER	EL-T-7155-00
296	2	EL067	P C B	PCB	PLASSER	EK-229-LV01
297	2	EL068	P C B	PCB	PLASSER	EK-335-LV-00
298	2	EL069	P C B	PCB	PLASSER	EK-813-SV-00
299	2	EL070	P C B	PCB	PLASSER	EK-255-LV-00B
300	2	EL072	P C B	PCB	PLASSER	EK-144V-00
301	2	EL075	P C B	PCB	PLASSER	EL-T-5587-00
302	2	EL076	P C B	PCB	PLASSER	EL-T-5156-00
303	2	EL077	P C B	PCB	PLASSER	EK-277-LV-02
304	2	EL078	P C B	PCB	PLASSER	EK-275-LV-02
305	2	EL080	P C B	PCB	PLASSER	EL-T-1190-00A
306	2	EL082	P C B	PCB	PLASSER	EL-T-5721-00
307	2	EL084	P C B	PCB	PLASSER	EK-120-V-00
308	2	EL085	P C B	PCB	PLASSER	EK-80V-00
309	2	EL086	P C B	PCB	PLASSER	EK-1116
310	2	EL087	P C B	PCB	PLASSER	EK-290-LV00
311	2	EL088	P C B	PCB	PLASSER	EK-2343-LV-00A
312	2	EL089	P C B	PCB	PLASSER	EK-16V-00B
313	2	EL090	P C B	PCB	PLASSER	EK-217
314	2	EL095	P C B	PCB	PLASSER	EK-2361-LV-00
315	2	EL097	P C B	PCB	PLASSER	EL-T-1442-00A
316	2	EL105	P C B	PCB	PLASSER	EK-79-00
317	2	EL108	P C B	PCB	PLASSER	EL-T 998-00A
318	2	EL111	P C B	PCB	PLASSER	EK-2351-LV-00
319	2	EL116	P C B	PCB	PLASSER	EL-T-5035-00
320	2	EL117	P C B	PCB	PLASSER	EK-2038-LV-00
321	2	EL121	P C B	PCB	PLASSER	EK-132-V-00
322	2	EL124	P C B	PCB	PLASSER	EL-T-5024-00
323	2	EL129	P C B	PCB	PLASSER	EK-347-LV-00B
324	2	EL134	P C B	PCB	PLASSER	EK-2140-LV-00
325	2	EL138	P C B	PCB	PLASSER	EK-345-LV-00
326	2	EL141	P C B	PCB	PLASSER	EL-T-5103
327	2	EL143	P C B	PCB	PLASSER	EK-430DV-00
328	2	EL145	P C B	PCB	PLASSER	EL-T-5105
329	2	EL149	P C B	PCB	PLASSER	EK-28-V-00
330	2	EL150	P C B	PCB	PLASSER	EK-24-V-00A
331	2	EL151	P C B	PCB	PLASSER	EK-176V-00/1.5AB
332	2	EL152	P C B	PCB	PLASSER	EK-553P-00B
333	2	EL153	P C B	PCB	PLASSER	EK-502-P-00A
334	2	EL154	P C B	PCB	PLASSER	EK-851-SV-00
335	2	EL155	P C B	PCB	PLASSER	EK-99-V-00
336	2	EL157	P C B	PCB	PLASSER	EK-346-LV-00
337	2	EL160	P C B	PCB	PLASSER	EK-348LV-00
338	2	EL161	P C B	PCB	PLASSER	ELT-5104
339	2	EL162	P C B	PCB	PLASSER	VT-3005-5032-A-822

S.N.	S S F	Lc No	Description	Item Ty	Make for PAC	Part No
340	2	EL163	P C B	PCB	PLASSER	EL-T-5592-00
341	2	EL166	P C B	PCB	PLASSER	EK-2360-LV-00
342	2	EL169	P C B	PCB	PLASSER	EK-349-LV-00
343	2	EL171	P C B	PCB	PLASSER	EK-2173-LV-00
344	2	EL176	P C B	PCB	PLASSER	EK-657P-00A
345	2	EL185	P C B	PCB	PLASSER	EK-2072LV-00
346	2	EL195	P C B	PCB	PLASSER	EK-653P-00
347	2	EL196	P C B	PCB	PLASSER	EK-658P-00
348	2	EL202	P C B	PCB	PLASSER	EK-602-E-00
349	2	EL203	P C B	PCB	PLASSER	EL-T-5131-00
350	2	EL206	P C B	PCB	PLASSER	ELT-5630-00C
351	2	EL210	P C B	PCB	PLASSER	EK-2041-LV-00
352	2	EL211	P C B	PCB	PLASSER	EK-2042-LV-00
353	2	EL212	P C B	PCB	PLASSER	EK-719-A-00
354	2	EL215	P C B	PCB	PLASSER	EK-652P-00
355	2	EL220	P C B	PCB	PLASSER	EK-651P-00-A
356	2	EL221	P C B	PCB	PLASSER	EL-T-5598-00
357	2	EL222	P C B	PCB	PLASSER	EK-3045-LV-00
358	2	EL223	P C B	PCB	PLASSER	ELT-5226-00A
359	2	EL224	P C B	PCB	PLASSER	EL-T-5255-00A
360	2	EL225	P C B	PCB	PLASSER	EL-T-5390-00
361	2	EL226	P C B	PCB	PLASSER	EK-140V-00
362	2	EL227	P C B	PCB	PLASSER	EL-T-5177-00
363	2	EL228	P C B	PCB	PLASSER	EK-650-00
364	2	EL237	P C B	PCB	PLASSER	EK-816-SV-00
365	2	EL238	P C B	PCB	PLASSER	EK-197-00A
366	2	EL239	P C B	PCB	PLASSER	EK-3049-LV-00
367	2	EL240	P C B	PCB	PLASSER	EK-815-SV-00A
368	2	EL241	P C B	PCB	PLASSER	EK-654E-00
369	2	EL242	P C B	PCB	PLASSER	EK-1AP7-00
370	2	EL243	P C B	PCB	PLASSER	EK-202V-00A
371	2	EL244	P C B	PCB	PLASSER	EK-193V-00
372	2	EL245	P C B	PCB	PLASSER	EK-150V-00B
373	2	EL247	P C B	PCB	PLASSER	EL-T-5533-00A
374	2	EL248	P C B	PCB	PLASSER	EK-2286-LV-00
375	2	EL249	P C B	PCB	PLASSER	EK-2039-LV-00
376	2	EL250	P C B	PCB	PLASSER	EK-2195-LV-00
377	2	EL130	P C B	PCB	PLASSER	EK-429DV-00
378	2	EL246	P C B	PCB	PLASSER	EL-T-5352-00
379	2	EL147	P C B	PCB	PLASSER	EK-3069-LV-00
380	2	EL159	P C B [MICRO CONTROLLER]	PCB	PLASSER	EK-110-00A
381	2	EL236	PCB [LCD DISPLAY]	PCB	PLASSER	ELT-5621-00
382	2	EL103	POWER PACK	PCB	PLASSER	EL-T-7050-400
383	2	EL165	RACK WITH PCB EK-812	PCB	PLASSER	EL-T-1807, EK-812
384	2	EL120	STRIP FOR PCB	PCB	PLASSER	2-166010-1
385	2	EL120	STRIP FOR PCB	PCB	PLASSER	2-166010-1
386	2	EL194	TEST ADOPTER	PCB	PLASSER	EL-T-966-00
387	2	SR214	SEAL KIT FOR BRAKE VALVE	PN	PLASSER	90364-DS (IMP)
388	2	GL498	PNUE / AIR BRAKE CYLINDER 8"NOS"	PNC	PLASSER	90227
389	2	BM056	PNUE. CYLINDER	PNC	PLASSER	64-03-4000-114
390	2	BM057	PNUE. CYLINDER	PNC	PLASSER	64-03-4000-62

S.N.	S S F	Lc No	Description	Item Ty	Make for PAC	Part No
391	2	DU072	PNEUMATIC BRAKE CYLINDER	PNC	PASSER	90226 , BGS-12"
392	2	GL323	DOUBLE ACTING PNEU PRESSURE GAUGE / MANOMETER	PNO	PASSER	90283 / 90284
393	2	TX114	KIT FOR AIR DRYER	PNO	PASSER	432-406-9202
394	2	FR150	PNEUMATIC COOLING SYSTEM	PNO	PASSER	64-03-4000-278
395	2	GL436	RESERVIOR [AIR TANK] 100 LTRS	PNO	PASSER	90157
396	2	GL546	SAFTY VALVE	PNO	PASSER	90204
397	2	GL518	AIR PRESSURE REGULATOR VALVE	PNU	PASSER	90247
398	2	TX072	AIR DRYER	PNV	PASSER	90187
399	3	BM038	CHECK VALVE	PNV	PASSER	112556
400	2	DU127	DRIP CUP	PNV	PASSER	90356
401	2	DU129	DRIVER'S BRAKE VALVE	PNV	PASSER	90366
402	2	FR123	EMERGENCY BRAKE VALUE	PNV	PASSER	90306
403	2	TX103	IDLER VALVE	PNV	PASSER	90202
404	2	GL540	PNEUMATIC BRAKE VALVE	PNV	PASSER	90364 , ZB-03
405	2	TX096	REPAIR KIT FOR AIR DRYER CONSISTING OF: [i] SEAL KIT 90187 DS =1No. [ii] FILTER ELEMENT 90187 ES = 1No., [iii] AIR CLEANER 4324-069-202 = 2 No	PNV	PASSER	90187 DS, 90187 ES, 4324-069-202
406	2	TX102	UNLOADER VALVE	PNV	PASSER	90201
407	2	EL142	CIRCUIT BRAKER /LOADSTER SWITCH	POT	PASSER	EL-T-7126-5A/8A/15A / 25A / 35A / 40A
408	2	EL316	CIRCUIT BREAKER	POT	PASSER	EL-T-7126/8 AMP
409	2	EL317	CIRCUIT BREAKER	POT	PASSER	EL-T-7126/15 AMP
410	2	EL318	CIRCUIT BREAKER	POT	PASSER	EL-T-7129/10 AMP
411	2	EL319	CIRCUIT BREAKER	POT	PASSER	EL-T-7126/20 AMP.
412	2	EL320	CIRCUIT BREAKER	POT	PASSER	EL-T-7126/5 AMP
413	2	EL322	CIRCUIT BREAKER	POT	PASSER	EL-T-7126/35 AMP
414	2	EL315	CIRCUIT BREAKER	POT	PASSER	452-K34FN2/100A
415	2	EL321	CIRCUIT BREAKER / LOADESTER SWITCH	POT	PASSER	EL-T-7126-40A
416	2	EL201	DEPTH INDICATOR (POTENOMETER)	POT	PASSER	EL-T-5016-00
417	2	EL170	INDICATOR	POT	PASSER	1413/ERSAT
418	2	EL184	INDICATOR	POT	PASSER	EL-T-970-00A
419	2	EL119	POTENTIOMETER	POT	PASSER	20K OHM + 10 S KALA/K 200G
420	2	EL133	POTENTIOMETER	POT	PASSER	EL-T-1062
421	2	EL118	POTENTIOMETER	POT	PASSER	20K OHM-5-S KALA/K 200G
422	2	EL007	POTENTIOMETER	POT	PASSER	EL-T-7008/1100
423	2	EL286	RELAY	POT	PASSER	EL-T-7175-NA
424	2	EL005	RELAY	POT	PASSER	REL-26-01/24V AC/GM- 10/24LQ/203024
425	2	EL256	RELAY	POT	PASSER	EL-T-7125-NA
426	2	EL265	RELAY	POT	PASSER	EMG-10-REL / KSR-G24 / 21-LC
427	2	EL297	RELAY	POT	PASSER	332002250
428	2	EL304	RELAY	POT	PASSER	RM-732024
429	2	EL323	RELAY	POT	PASSER	EL-T-7064/24
430	2	EL326	RELAY	POT	PASSER	33525143
431	2	EL177	RELAY	POT	PASSER	0331801300 / 033521543
432	2	EL178	RELAY	POT	PASSER	333009002
433	2	EL179	RELAY	POT	PASSER	332209203
434	2	EL190	RELAY	POT	PASSER	EL-T-7018
435	2	EL009	ROTARY BUTTON/ POTENTIOMETER SINGLE TURN	POT	PASSER	2036612
436	2	EL299	TIME RELAY	POT	PASSER	ZR-200041/ERSATZ , ZR-032090

S.N.	S S F	Lc No	Description	Item Ty	Make for PAC	Part No
437	2	EL022	TIME RELAY	POT	PLASSER	H3T / 24V /0,1- 5 SEC.
438	2	EL181	AMP METER	SEN	PLASSER	EL-T-7013-00 / ERSAT-2
439	2	EL233	AMPERE METER	SEN	PLASSER	EL-T-1262-00
440	2	EL302	AMPERE METER	SEN	PLASSER	EL-T-7097-00E
441	2	EL305	AMPERE METER	SEN	PLASSER	EL-T-7093-00E
442	2	EL307	AMPERE METER	SEN	PLASSER	EL-T-7036-00E
443	2	LG300	CONECTOR / PCB STRIP 48 PIN MALE / FEMALE	SEN	PLASSER	4880L / 2-166010-1
444	2	EL180	COVER (HOOD)	SEN	PLASSER	31-902-9
445	2	EL285	EBE STEP SWITCH	SEN	PLASSER	BX1/1X24V.
446	2	EL217	ENGINE TEMP SENSOR	SEN	PLASSER	323-801-003-001 , 323-801-028-001
447	2	EL028	GALVANOMETER	SEN	PLASSER	EL-T-80-00
448	2	EL218	GEAR BOX	SEN	PLASSER	1032-04-01-1389 / 1032-04-01-1383
449	2	EL216	INDICATOR	SEN	PLASSER	323-801-004-002
450	2	EL205	INDICATOR (DIGITAL DISPLAY)	SEN	PLASSER	EL-T-1585/20V
451	2	EL200	INDUCTIVE TRANSMITTER ZF GEAR BOX (TRANSDUCER)	SEN	PLASSER	6041-315-007
452	2	EL324	LIMIT INDICATOR	SEN	PLASSER	TQ441-01/01 YUER-1572
453	2	EL011	M A METER	SEN	PLASSER	EL-T-978-00
454	2	LG138	MCB/ CIRCUIT BREAKER 15/20 AMP.	SEN	PLASSER	EL-T-7126-8A
455	2	EL192	PLUG	SEN	PLASSER	098635200 (IMPORTED)
456	2	EL172	PRESSURE GAUGE	SEN	PLASSER	EL-T-1256-00A , EL-T-1001-00A / ERSAT2
457	2	EL235	RAIL	SEN	PLASSER	JK020014
458	2	EL182	RPM METER (REVOLUTION COUNTER)	SEN	PLASSER	EL-T-1264-00B
459	2	EL137	SENSOR	SEN	PLASSER	323-805/001/001
460	2	EL010	SENSOR / TRANSDUCER	SEN	PLASSER	2155-0100-0002
461	2	EL045	STEP SWITCH	SEN	PLASSER	EL-T-7052
462	2	EL231	STEP SWITCH	SEN	PLASSER	EL-T-7140/4
463	2	EL289	SWITCH	SEN	PLASSER	GX1/1X12V
464	2	EL284	SWITCH	SEN	PLASSER	GX1/1X12V.
465	2	EL146	SWITCH COMPLETE	SEN	PLASSER	CHO-180
466	2	EL298	TEMPERATURE SENSOR	SEN	PLASSER	323/801/028/001
467	2	EL301	TEMPERATURE SWITCH	SEN	PLASSER	0242-12
468	2	EL193	TEMPRETURE SWITCH	SEN	PLASSER	232-011/017/032
469	2	EL300	VACCUME SWITCH	SEN	PLASSER	3900062901
470	2	GL167	CHORD WIRE 2 MM	TRD	PLASSER	2 MMD-BONDEZVG
471	2	EL029	CORD WIRE FOR TRANSDUCER	TRD	PLASSER	EL-T-576-1-36 , EL-T-576-08
472	3	CS008	FILTER ELEMENT FOR HYD VARIABLE PUMP	TRD	PLASSER	HYS-501-90-10 ES
473	2	EL127	PENDULAM	TRD	PLASSER	EL-T-2021-00-1A
474	2	EL113	PENDULUM	TRD	PLASSER	EL-T-2036-00A
475	2	EL296	PENDULUM.	TRD	PLASSER	ELT-7035.
476	2	EL293	PROPORTIONAL TRANSDUCER	TRD	PLASSER	EL-T-1064-00 RE / LI
477	2	EL232	TRANSDUCER	TRD	PLASSER	EL-T-2118/4
478	2	EL288	TRANSDUCER	TRD	PLASSER	EL-T-1199-BR-L-LINK
479	2	EL328	TRANSDUCER / PRESSURE SWITCH	TRD	PLASSER	1175981 / 1182841
480	5	TR003	ARM WELDMENT FOR TRT	TRT	PHOOLTAS HARSCO	D1913 WAC
481	5	TR006	CARRIER WELDMENT FOR TRT	TRT	PHOOLTAS HARSCO	C 2511 WAA / C 2511 WAB
482	5	TR001	GEAR BOX & AXLE ASSY. OF TRT,SL. NO.144,146,147	TRT	PHOOLTAS HARSCO	H-3191 W01
483	5	TR002	HYD PUMP FOR TRT	TRT	PHOOLTAS HARSCO	D-434622
484	5	TR009	O. T. CONVEYOR ASSEMBLY	TRT	PHOOLTAS HARSCO	02011507-0-006

S.N.	S S F	Lc No	Description	Item Ty	Make for PAC	Part No
485	5	TR007	OLD SLEEPER PICKUP UNIT	TRT	PHOOLTAS HARSCO	D 1911 VAD
486	5	TR004	ROLLER SLED ASSEMBLY FOR TRT	TRT	PHOOLTAS HARSCO	B8534 WAA
487	5	TR008	WATCH BEND SLED ASSEMBLY	TRT	PHOOLTAS HARSCO	C2510WAA
488	3	DU119	PISTON SCREW FOR SQ CYL BIG OF T/U OF 09-3X [IMPORTED]	TUO	PLASSER	2E-36-48 J
489	1	SR142	SEAL RING	TUS	PLASSER	DL-12-22
490	1	SR172	SEAL SET FOR BIG SQ CYL	TUS	PLASSER	HZS-DS-243 IMP
491	1	SR171	SEAL SET FOR SMALL SQ CYL	TUS	PLASSER	HZS-DS-401 IMP-PLASSER
492	3	TX121	CAP NUT FOR TAMPING UNIT OF 09-3X MACHINE	TUX	PLASSER	223-12374-9
493	3	TX116	CONNECTION FOR TAMPING UNIT OF 09-3X MACHINE	TUX	PLASSER	432-23030-1
494	3	TX124	FITTING FOR TAMPING UNIT OF 09-3X MACHINE	TUX	PLASSER	GE6LR-1/4Z (11602107)
495	3	TX123	FITTINGS FOR TAMPING UNIT OF 09-3X MACHINE	TUX	PLASSER	GE6LLR (103101)
496	3	TX097	P B BUSH FOR TAMPING ARM	TUX	PLASSER	2E-34-210
497	3	TX120	RING FOR TAMPING UNIT OF 09-3X MACHINE	TUX	PLASSER	404-23034-1
498	3	TX122	RING FOR TAMPING UNIT OF 09-3X MACHINE	TUX	PLASSER	223-12295-2
499	3	TX117	SCREW BUSHING FOR TAMPING UNIT 09-3X MACHINE	TUX	PLASSER	432-23031-1
500	3	TX125	SPIRAL BAND FOR TAMPING UNIT OF 0903X MACHINE	TUX	PLASSER	KVM/SP12N SUBSTITUTE 113-30575-3
501	3	TX119	TUBE FOR TAMPING UNIT 09-3X MACHINE	TUX	PLASSER	B-4X2-1
502	3	TX118	VALVE BODY FOR TAMPING UNIT 09-3X MACHINE	TUX	PLASSER	504-30364-4
503	3	FR176	DRIVE SHAFT FOR BCM	WXL	PLASSER	305-64-04-3246
504	3	BM015	PINION SHAFT	WXL	PLASSER	64-02-2105-00
505	3	BM085	PRESSURE SPRING	WXL	PLASSER	2-17984
506	3	BM020	SEAL RING	WXL	PLASSER	2-22155
507	3	BM021	SEAL RING	WXL	PLASSER	2-05912
508	3	BM023	SEAL RING	WXL	PLASSER	2-05928
509	3	BM024	SEAL RING	WXL	PLASSER	2-05940
510	3	BM025	SEAL RING	WXL	PLASSER	2-24570
511	3	BM022	SEAL RING	WXL	PLASSER	2-05929
512	4	LG155	AXLE NEEDLE CAGE 0630-302-095 HOUSING DISC 0635-290-061, PLATE 0635-290-062 (16080)	ZF	ZF	0630-302-095,0635-290-061,0635-290-062
513	4	LG073	BALL	ZF	ZF	0635-460-029
514	4	LG081	BALL HOUSING FOR ZF GEAR BOX	ZF	ZF	4616-303-028
515	4	LG070	CABLE CLIP FOR ZF GEAR BOX	ZF	ZF	0659-160-054
516	4	LG036	CLUTCH DISC FOR TORQUE CONVERTOR OF ZF	ZF	ZF	4166-236-111/34
517	4	LG083	CONVERTOR COVER	ZF	ZF	4616-391-319 / 4616-301-323
518	4	LG087	CONVERTOR FOR ZF GEAR BOX	ZF	ZF	4166-039-077
519	4	LG031	CONVERTOR PRESSURE VALVE GR. No.4616-120 FOR ZF GEAR BOX 4WG-65-IIWK	ZF	ZF	4609-220-002
520	4	LG027	CONVERTOR RELIEF VALVE FOR ZF GEAR BOX W4G-65- 11-WK	ZF	ZF	4616-120-001
521	4	LG099	COVER FOR ZF GEAR BOX	ZF	ZF	4616-303-031
522	4	LG104	COVER PLATE FOR ZF GEAR BOX	ZF	ZF	4616-306-087
523	4	LG052	CUP SPRING FOR ZF GEAR BOX	ZF	ZF	732000072
524	4	LG071	CYLINDER PIN FOR ZF GEAR BOX	ZF	ZF	0631-306-179
525	4	LG092	ELECTRIC CIRCUIT	ZF	ZF	4616-441-011R/ 4616-159-022
526	4	LG050	FITTING KEY FOR ZF GEAR BOX	ZF	ZF	0631-501-213

S.N.	S S F	Lc No	Description	Item Ty	Make for PAC	Part No
527	4	LG028	GASKET SET FOR ZF GEAR BOX	ZF	ZF	4616-306-098,4616-306-096,4616-306-100,0634-303-951
528	4	LG084	GEAR FOR ZF GEAR BOX	ZF	ZF	4616-306/308-111
529	4	LG042	GEAR FOR ZF GEAR BOX	ZF	ZF	4616-306-111
530	4	LG043	GEAR SELECTOR FOR ZF GEAR BOX	ZF	ZF	6006-016-109
531	4	LG045	GEAR SHIFT SYSTEM COMPLETE FOR ZF GEAR BOX	ZF	ZF	4644-164-003
532	4	LG041	HOLLOW SCREW FOR ZF GEAR BOX	ZF	ZF	0637-835-005/515
533	4	LG096	HOUSING	ZF	ZF	4616-301-235
534	4	LG079	HOUSING FOR ZF GEAR BOX	ZF	ZF	4616-301-304
535	4	LG080	HOUSING FOR ZF GEAR BOX	ZF	ZF	4616-301-309
536	4	LG082	HOUSING FOR ZF GEAR BOX	ZF	ZF	4616-336-010
537	4	LG097	HOUSING FOR ZF GEAR BOX	ZF	ZF	4116-301-175
538	4	LG065	INTERMEDIATE RING	ZF	ZF	0730-001-927
539	4	LG032	LAY SHAFT	ZF	ZF	4616-308-031
540	4	BR127	NEDDLE CAGE BEARING	ZF	ZF	0735-320-315
541	4	BR128	NEDDLE CAGE BEARING	ZF	ZF	0735-320-314
542	4	LG105	NEEDLE SLEEVE / VALVE	ZF	ZF	0750-115-356
543	4	LG074	O' CLUTCH DISC FOR CONVERTOR CLUTCH OF ZF GEAR BOX	ZF	ZF	4139-334-002
544	4	LG077	O' CLUTCH DISC FOR ZF GEAR BOX	ZF	ZF	4616-208/223-003
545	4	LG044	O RING FOR ZF GEAR BOX	ZF	ZF	0734-303-035
546	4	LG076	O' RING FOR ZF GEAR BOX	ZF	ZF	0734-303-035
547	4	LG089	OIL COIL PLATE	ZF	ZF	4616-303-006
548	4	LG094	OIL FEED BUSH	ZF	ZF	4616-303-011
549	4	LG093	OIL FEED RING	ZF	ZF	4616-303-008
550	4	LG030	OIL PUMP FOR ZF GEAR BOX 4WG-65-IIWK	ZF	ZF	7647-955-123
551	4	LG047	OUT PUT FLANGE FOR ZF GEAR BOX	ZF	ZF	4616-303-041
552	4	LG039	OUT PUT SHAFT FOR ZF GEAR BOX	ZF	ZF	4616-303-096 , 4616-303-171
553	4	LG069	PIPE UNION	ZF	ZF	0637-880-071
554	4	LG064	PISTON RING	ZF	ZF	0634-402-140
555	4	LG108	PISTON RING	ZF	ZF	55X2.5, SH-DIN-34110, 0634-402-052
556	4	LG109	PISTON RING	ZF	ZF	92X2.5, 0634-402-110
557	4	LG110	PISTON RING	ZF	ZF	320X332X2.5, 0634-305-093,155-VITON
558	4	LG111	PISTON RING	ZF	ZF	140X149X2 , 0634-305-089, 135-VITON
559	4	LG112	PISTON RING	ZF	ZF	0634-305-020, LFN-155-VITON
560	4	LG114	PISTON RING	ZF	ZF	260X268X2.2, 0634-305-026
561	4	LG113	PISTON RING (22123)	ZF	ZF	420X430X03, 155-VITON, 0634-305-042
562	4	LG091	PISTON RING FOR ZF GEAR BOX	ZF	ZF	90X97X2,0634-305-009
563	4	LG107	PISTON RING FOR ZF GEAR BOX	ZF	ZF	39.5X2 0634-402-029-DIN-34110
564	4	LG057	PLATE FOR ZF GEAR BOX	ZF	ZF	0635-290-062
565	4	TX109	PLUG	ZF	ZF	900021267
566	4	LG038	PLUG FOR ZF GEAR BOX	ZF	ZF	6029-199-002,0659-050-178/100
567	4	LG046	PUMP FLANGE	ZF	ZF	4616-329-005
568	4	LG088	QUILL SHAFT	ZF	ZF	4616-302-112
569	4	LG098	QUILL SHAFT	ZF	ZF	4616-301-244
570	4	LG106	REDUCTION VALVE FOR ZF GEAR BOX	ZF	ZF	4644-306-599
571	4	BR132	ROLLER CAGE	ZF	ZF	0735-353-243
572	4	BR126	ROLLER CAGE BEARING	ZF	ZF	0735-358-032

S.N.	S S F	Lc No	Description	Item Ty	Make for PAC	Part No
573	4	LG067	SEALING CAP FOR ZF GEAR BOX	ZF	ZF	0630-361-033
574	4	LG068	SEALING CAP FOR ZF GEAR BOX	ZF	ZF	0630-361-052
575	4	LG061	SET OF COMPRESSION SPRING CONSISTING OF:	ZF	ZF	0732-040-265,
576	4	LG040	SET OF GASKET FOR SHIFTER ASSY. OF ZF GEAR BOX 207 TYPE	ZF	ZF	4616-306-086,4616-306-088,4616-306-090,4616-306-091
577	4	LG085	SET OF PIPE	ZF	ZF	4616-121
578	4	LG059	SET OF PISTON FOR ZF GEAR BOX CONSISTING OF:	ZF	ZF	1419-306-063= , 4620-306-255= , 4620-306-413= , 4620-306-414= , 4642-306-091= , 4644-306-010= ,
579	4	LG056	SET OF RETAINING RING FOR ZF GEAR BOX CONSISTING OF:	ZF	ZF	0630-501-025=2, 0630-501-031=1, 0630-501-035=1, 0630-501-039=1, 0630-501-046=4, 0630-501-048=1, 0630-501-050=3, 0630-501-052=1, 0630-501-054=2, 0630-501-060=2
580	4	LG058	SET OF SCREW PLUG FOR ZF GEAR BOX CONSISTING OF:	ZF	ZF	0636-302-009=3, 0636-307-025=1, 0636-304-009=1,0636-305-046=1
581	4	LG060	SET OF SEAL RING FOR ZF GEAR BOX CONSISTING OF:	ZF	ZF	0634-801-045
582	4	LG048	SET OF SNAPING RING FOR ZF GEAR BOX 0630513078, 0630513125	ZF	ZF	0630503010,0630503015,0630513092, 0630503023,0635513045,
583	4	LG054	SET OF STUD FOR ZF GEAR BOX , (i) 0636-610-609=3 Nos., (ii)0636-610/611-020=11 nos. (iii)0636-0610-127=1 no. (iv)0636-610-177=1 no.	ZF	ZF	0636-610-109,0636-610-020,0636-610-127,0636-610-177
584	4	LG051	SET OF TAB WASHER FOR ZF GEAR BOX	ZF	ZF	1269302164 / 4616305007
585	4	LG055	SET OF WASHER FOR ZF GEAR BOX CONSISTING :	ZF	ZF	0630-001-012=72, 0630-001-037=54,0630-000-874=1,0630-001-828=4,0730-002-635=1, 0730-002-137=4,0730-002-626=5,0730-004-291=1,0730-004-292=1, 0730-101-795=3
586	4	LG029	SHIFT CONTROL ASSY.FOR ZF GEAR BOX 4WG-65-11WK	ZF	ZF	4616-159-007
587	4	LG101	SHIM	ZF	ZF	0730-102-464,63, 62,61,60,67,68,69
588	4	LG102	SHIM FOR ZF GEAR BOX	ZF	ZF	630-004-388/117/ 104/103/101/100
589	4	LG063	SHIM FOR ZF GEAR BOX OFF SIZES :	ZF	ZF	0730-001-879, 0730-000-257, 0730-000-258, 0730-102-459, 2050-309-066, 4607-316-081, 5010-303-020
590	4	LG103	SHIM OPTIONAL	ZF	ZF	2050-309-067/068/069
591	4	LG066	SHIM PLATE FOR ZF GEAR BOX	ZF	ZF	5010-304-015
592	4	LG049	SLOTTED PLUG FOR ZF GEAR BOX	ZF	ZF	0631-359-001
593	4	LG062	SOFT SEAL OFF SIZES :	ZF	ZF	0634-300-053, 0634-300-185, 0634-300-721, 0634-310-733, 0634-319-247, 0734-319-497
594	4	LG090	SOL VALVE	ZF	ZF	0501-319-202
595	4	LG075	SPRING CAP	ZF	ZF	6011-310-001
596	4	LG095	SPUR GEAR	ZF	ZF	4616-303-026
597	4	LG033	SPUR GEAR FOR ZF GEAR BOX	ZF	ZF	4616-308-052
598	4	LG100	SPUR GEAR FOR ZF GEAR BOX	ZF	ZF	4616-307-003
599	4	LG086	SUCTION TUBE FOR ZF GEAR BOX	ZF	ZF	4616-221-018
600	4	LG035	VALVE	ZF	ZF	501315338
601	4	LG152	VALVE	ZF	ZF	604/31002
602	4	LG072	WOODRUFF KEY FOR ZF GEAR BOX	ZF	ZF	0631-511-036
603	4	CS079	Z F GEAR BOX (IMPORTED)	ZF	ZF	4WG-65 / II / 4726 , 4616-000-163/207/206
604	3		O Ring	HYO	PLASSER	37.70X3.53NBR90
605	3		O Ring	HYO	PLASSER	32.97X3.53 NBR90
606	3		O Ring	HYO	PLASSER	47.22X3.53 NBR90

S.N.	S S E	Lc No	Description	Item Ty	Make for PAC	Part No
607	3		O Ring	HYO	PLASSER	21.89X2.62 NBR90
608	3		O Ring	HYO	PLASSER	18.72X2.62 NBR90
609	3		Cylinder ascending side	HYC	PLASSER	62.05.3000.60PL
610	3		Cylinder Descending side	HYC	PLASSER	62.05.3000.61PL
611	3		Hyd cylinder for BCM	HYC	PLASSER	HZMB-125-063-2100-1-001
612	3		Hyd cylinder for BCM	HYC	PLASSER	HZMBV-125-090-2250-1
613	3		Hyd cylinder for BCM	HYC	PLASSER	HZMB-100-063-1400-2-040
614	3		Hyd cylinder for BCM	HYC	PLASSER	62.05.3000.353
615	3		Hyd cylinder for FRM	HYC	PLASSER	HZGB-063-036-0190-1
616	3		Hyd cylinder for FRM	HYC	PLASSER	HZGB-063-036-0775-1
617	3		Hyd cylinder for FRM	HYC	PLASSER	HZGB-063-036-0400-1
618	3		Hyd cylinder for BCM	HYC	PLASSER	HZQk-125-050-0410-2-001
619	3		Hyd cylinder for BCM	HYC	PLASSER	HZMB-100-063-0600-2-041
620	3		Hyd cylinder forFRM	HYC	PLASSER	HZMBV-100-063-1170-2
621	3		Hyd cylinder forFRM	HYC	PLASSER	62.05.3000.63PL
622	3		Hyd cylinder forFRM	HYC	PLASSER	NZGB-080-045-0200-2
623	3		Hyd cylinder for BCM	HYC	PLASSER	HZMB-100-063-1600-2-001

CDMS/CPOH

SSE/CPOH

AXEN/CPOH

XEN/CPOH

Dy. C E / TMC / CPOH

Note: Seal set of BCM machine at SI Nos.215 to 225,227,228,231 to 235,237,241 was initially procured through PAC due to critical nature of working. Later on this will be shifted to Branded gradually.